


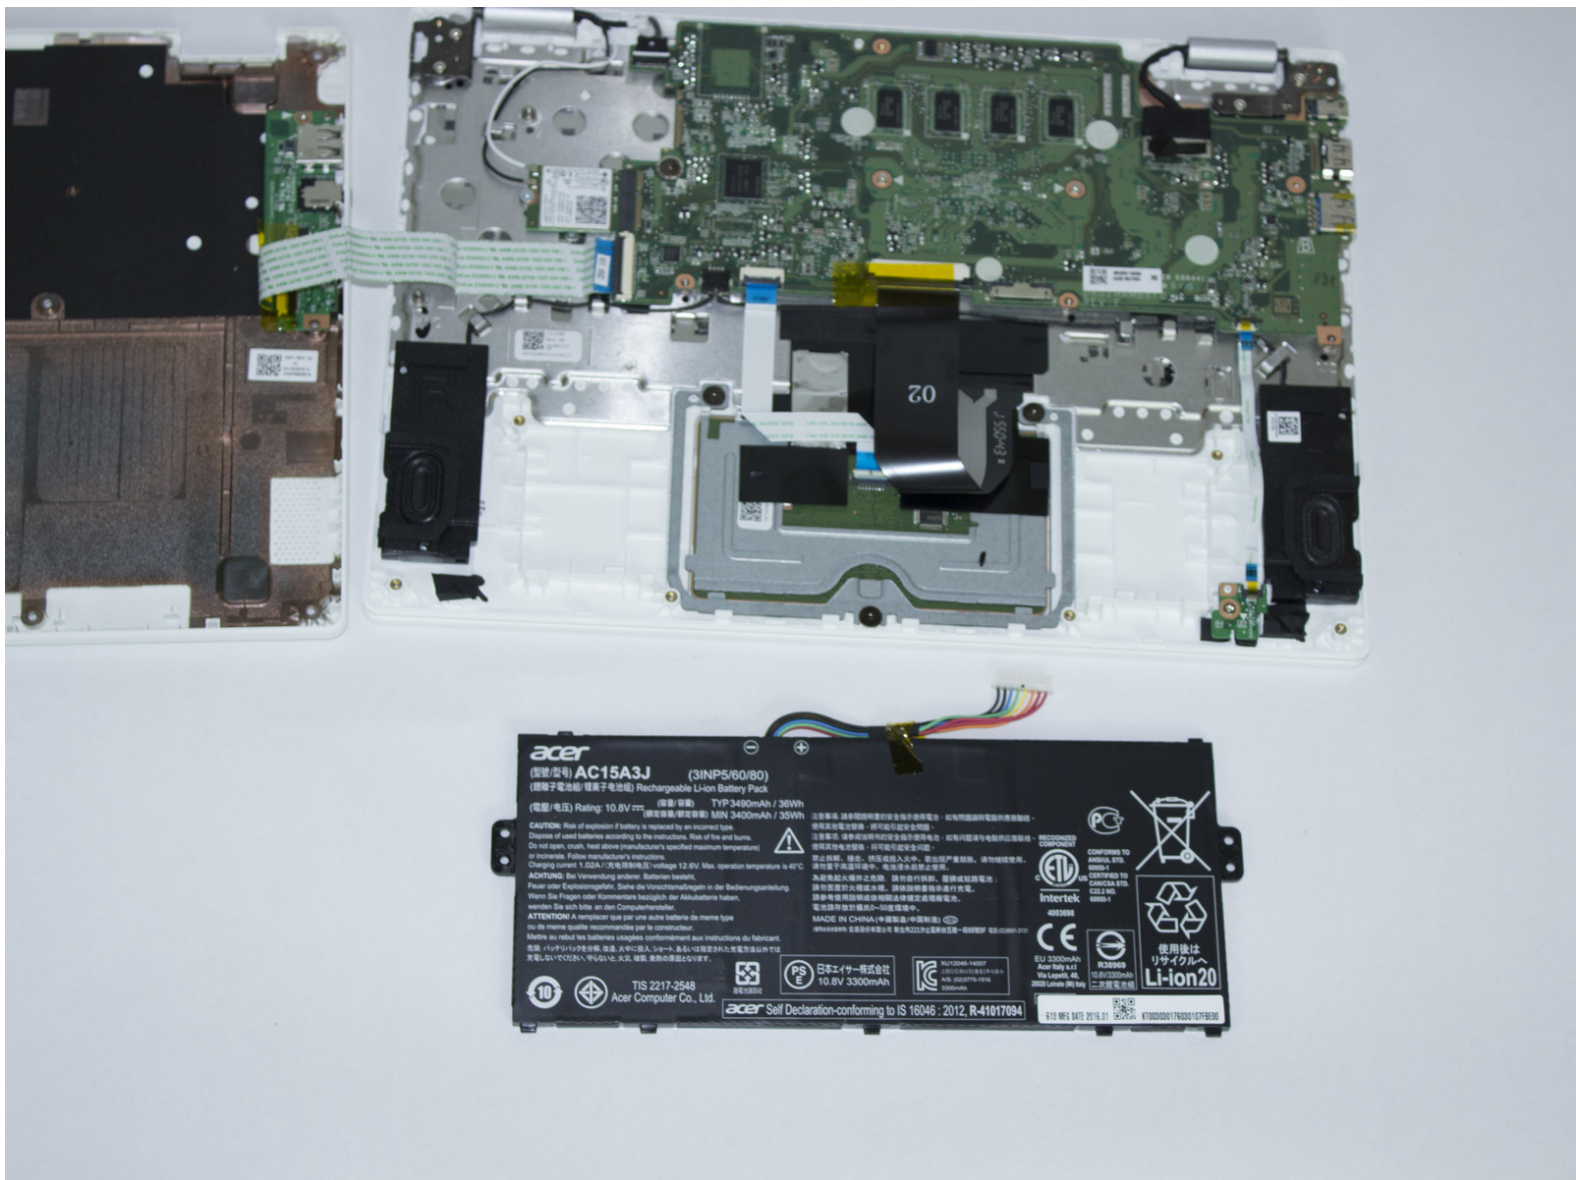

Acer Chromebook R11 Battery Replacement

Here's how to replace the battery in your Acer Chromebook R11!

Written By: Jermaine Hannans



INTRODUCTION

Having battery issues? Here's how to replace it!

To avoid generating static between you and the device, you should wear a rubber bracelet. Not doing so could potentially damage your device.



TOOLS:


- [JIS Driver Set](#) (1)



PARTS:


- [Acer CB5-132T-C1LK Chromebook Lower Case](#) (1)

Step 1 — Battery

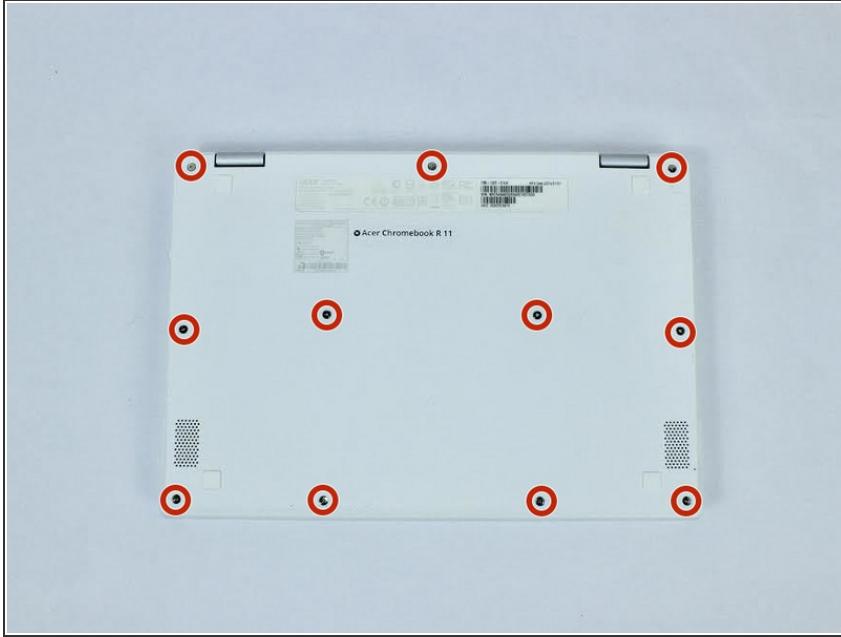

- The back cover of the R11 is held into place using 11 screws.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

Step 2

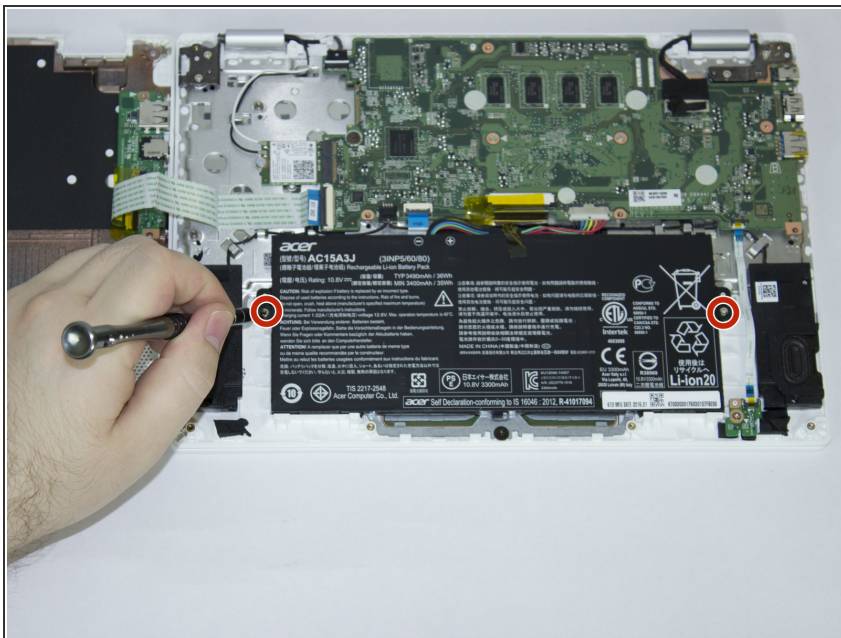

- Battery is located in the bottom half of the computer.
- Unscrew the two screws holding the battery in place. There is one on each side of the battery.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

Step 3



- Slide out the ribbon that is connecting the battery to the motherboard.
- There are 7 wires leading to it, and each is a different color of the rainbow.
- Disconnect the keyboard ribbon located at bottom center of motherboard.

Step 4



- Remove the battery by pulling upwards.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-15 05:41:33 AM.